



Depth Adjustment Fitting

Removal

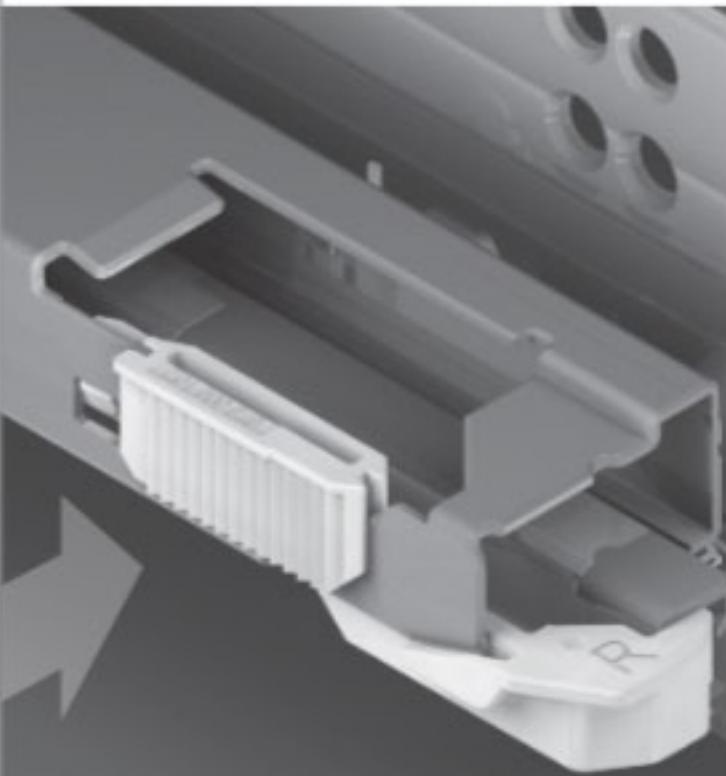


Press in on tab with screwdriver

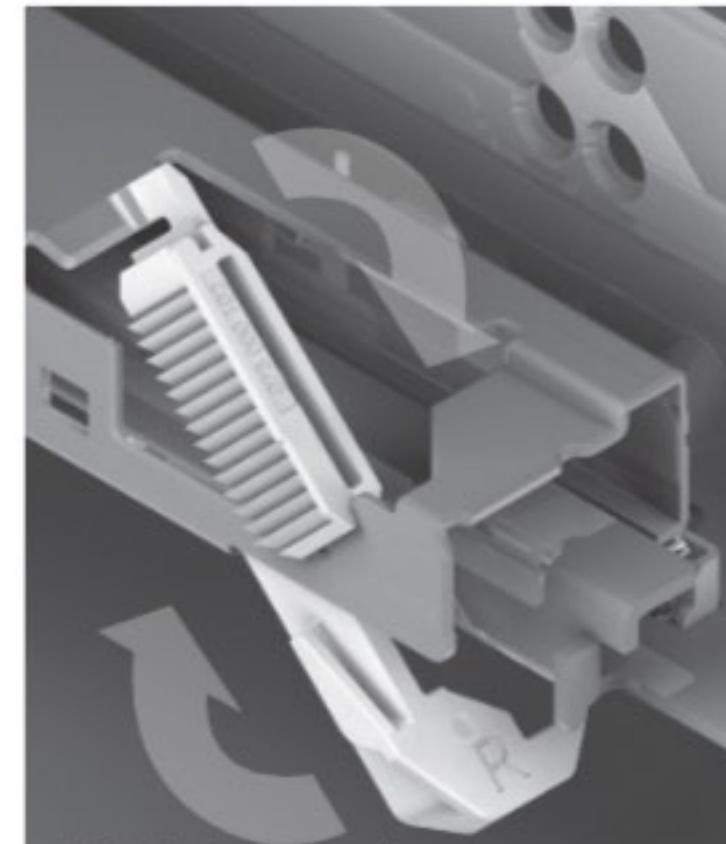


Rotate and remove fitting

Insertion

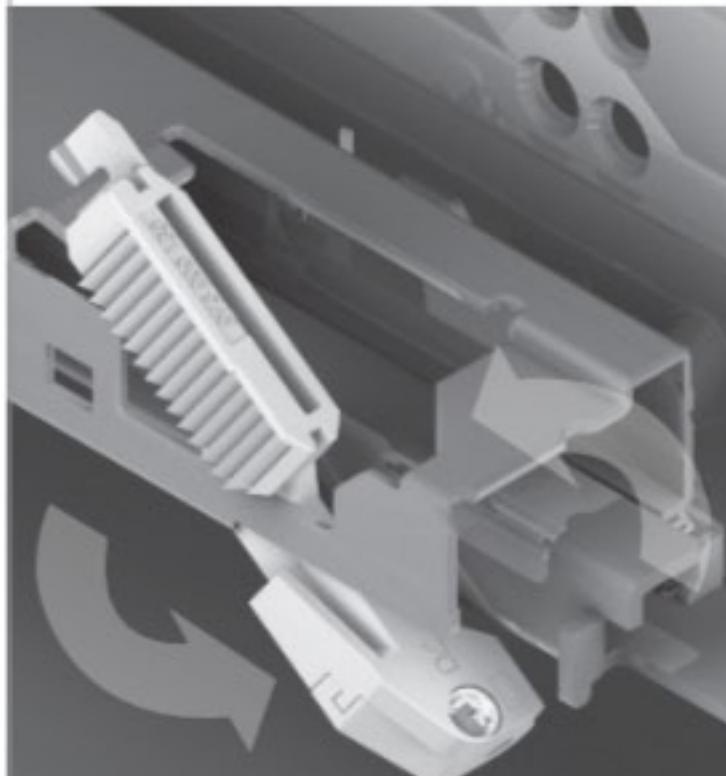

Insert Depth fitting and rotate to lock

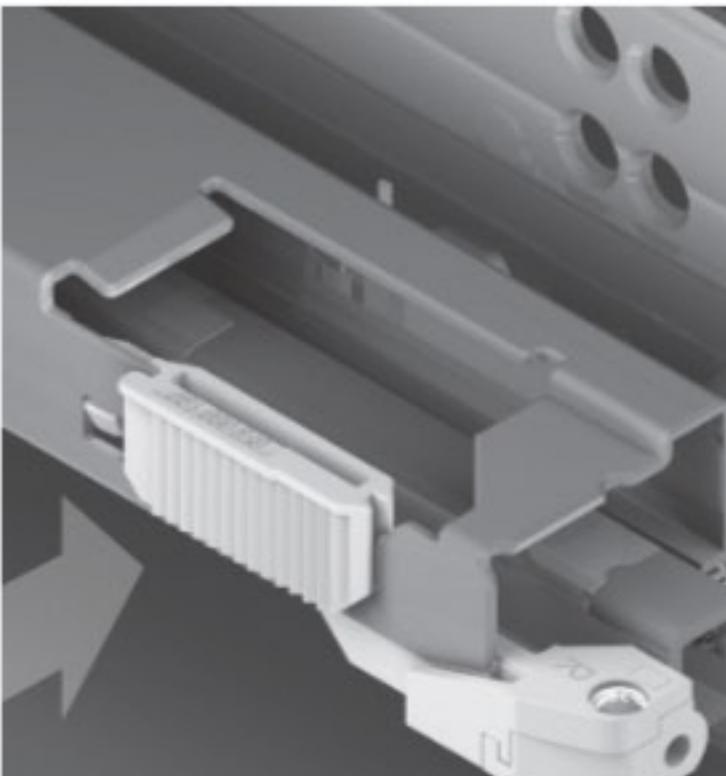

Fitting tab snaps into place

Removal - Remove existing standard fitting.

Insertion - Insert depth fitting.